


Mini-Mac Applicator Application Tooling Specification Air Feed-Mylar Tape Order No. 63885-0100

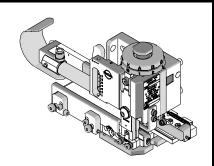

FEATURES

- Directly adapts to most crimp presses and automatic wire processors
- Applicator designed to industry standard mounting and shut height of 135.80mm (5.346")
- Conductor and insulation rings allow quick adjustment for conductor and insulation crimp height change
- Quick set-up time; plus the crimp height, track and feed adjustments can be set without removing the applicator from the crimp press

SCOPE

Products: Avikrimp® Tape fed Ring, Spade, and Quick Disconnect Terminals 24-26 AWG

Testing Mechanical

The tensile test, or pull test, is a means of evaluating the mechanical properties of the crimped connections. The following chart shows the UL and government specifications (MIL-T-7928) for various wire sizes. The tensile strength is shown in pounds and indicates the minimum acceptable force to break or separate the terminal from the conductor.

Color Code	Wire Size (AWG)	*UL - 486 A	*UL – 486 C	*UL – 310	*Military Class 2
Yellow	26	3	N/A	N/A	7
Yellow	24	5	N/A	N/A	10
Red	22	8	8	8	15
Red	20	13	10	13	19
Red	18	20	10	20	38
Blue	16	30	15	30	50
Blue	14	50	25	50	70
Yellow	12	70	35	70	110
Yellow	10	80	40	80	150
Red	8	90	45	N/A	225
Blue	6	100	50	N/A	300

^{*&}lt;u>UL - 486 A</u> - Terminals (Copper conductors only)

Doc No. 63885-0100 Release Date: 12-07-04 UNCONTROLLED COPY Page 1 of 7 Revision Date: 10-03-05

Revision: B

^{*}UL - 486 C - Butt Splices, Parallel Splices, Closed End Connectors, and Wire Nuts

^{*}UL - 310 - Quick Disconnects, Flag and Couplers

^{*}Military Class 2- Military Approved Terminals only as listed

Product List


The following is a partial list of the product order numbers and their specifications that this tool is designed to run. Updates to this list are available on www.molex.com.

Terminal No.	Terminal	Wire Size		Insulation Diameter Max.		Strip Length	
leililliai No.	Eng. No.	AWG	mm²	mm	ln.	mm	ln.
19019-0040	M-8130T	24-26	0.20-0.12	1.80	.071	4.76	.187
19019-0042	M-8133T	24-26	0.20-0.12	1.80	.071	4.76	.187
19019-0045	M-8136-032T	24-26	0.20-0.12	1.80	.071	4.76	.187
19019-0046	M-8136T	24-26	0.20-0.12	1.80	.071	4.76	.187
19058-0130	M-8118-06T	24-26	0.20-0.12	1.80	.071	5.16	.203
19058-0133	M-8118-08T	24-26	0.20-0.12	1.80	.071	5.16	.203
19058-0135	M-8118-10T	24-26	0.20-0.12	1.80	.071	5.16	.203
19058-0138	M-8120-06T	24-26	0.20-0.12	1.80	.071	5.16	.203
19058-0140	M-8122-00T	24-26	0.20-0.12	1.80	.071	5.16	.203
19058-0142	M-8122-02T	24-26	0.20-0.12	1.80	.071	5.16	.203
19058-0143	M-8122-04T	24-26	0.20-0.12	1.80	.071	5.16	.203
19058-0144	M-8122-06T	24-26	0.20-0.12	1.80	.071	5.16	.203
19073-0247	M-8113-02T	24-26	0.20-0.12	1.80	.071	5.16	.203
19073-0249	M-8113-04T	24-26	0.20-0.12	1.80	.071	5.16	.203
19073-0251	M-8113-06T	24-26	0.20-0.12	1.80	.071	5.16	.203
19073-0252	M-8113-08T	24-26	0.20-0.12	1.80	.071	5.16	.203
19073-0254	M-8114-02T	24-26	0.20-0.12	1.80	.071	5.16	.203
19073-0255	M-8114-04T	24-26	0.20-0.12	1.80	.071	5.16	.203
19073-0256	M-8116-04T	24-26	0.20-0.12	1.80	.071	5.16	.203
19073-0257	M-8116-06T	24-26	0.20-0.12	1.80	.071	5.16	.203
19095-0124	M-8115-02T	24-26	0.20-0.12	1.80	.071	5.16	.203
19095-0128	M-8119-06T	24-26	0.20-0.12	1.80	.071	5.16	.203
19095-0130	M-8119-08T	24-26	0.20-0.12	1.80	.071	5.16	.203
19095-0132	M-8119-10T	24-26	0.20-0.12	1.80	.071	5.16	.203
19127-0094	M-8117-02T	24-26	0.20-0.12	1.80	.071	5.16	.203
19198-0060	M-8116-02T	24-26	0.20-0.12	1.80	.071	5.16	.203
19198-0061	M-8120-04T	24-26	0.20-0.12	1.80	.071	5.16	.203
19198-0063	M-8120-08T	24-26	0.20-0.12	1.80	.071	5.16	.203
19198-0065	M-8121-04T	24-26	0.20-0.12	1.80	.071	5.16	.203
19198-0068	M-8123-00T	24-26	0.20-0.12	1.80	.071	5.16	.203

UNCONTROLLED COPY Page 2 of 7 Doc No. 63885-0100 Release Date: 12-07-04 Revision Date: 10-03-05

DEFINITION OF TERMS

The following illustrations are a generic terminal representation and not an exact image of any terminal listed in the scope.

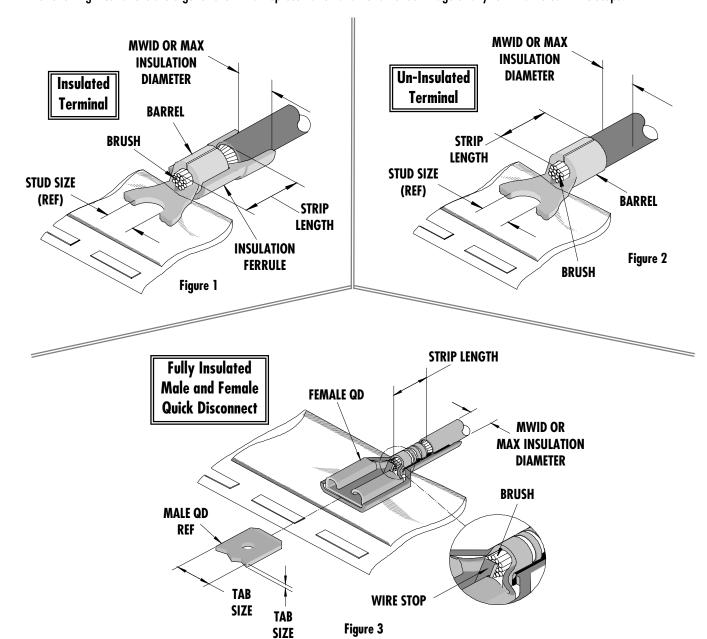


Doc No. 63885-0100 Revision: B Release Date: 12-07-04 Revision Date: 10-03-05

Tool Calibration

To recalibrate this applicator, make sure the power is completely shut off on the press.

- The Mini-Mac applicator must be properly installed in the press.
- Crimping dies must be properly installed in the Mini-Mac applicator.
- The recommended method of measuring the crimp height of the conductor dies is the soft metal slug method, (See Figure 4).
- 4. The slug must have a diameter 0.51 mm (.020") larger than the "X" No Go dimension before crimping.
- Place the soft metal slug (solder) into the nest of the bottom die and crimp (by hand cycling the press) similar to a terminal. The crimp height can be measured with a blade type micrometer or dial caliper, (Dimension "X").
- 6. Adjustment of the crimp height can be accomplished by indexing the conductor cam. The letter "A" gives the loosest position and "K" gives the tightest position. A total adjustment of 0.50mm (.020") can be achieved by adjusting the conductor cam.

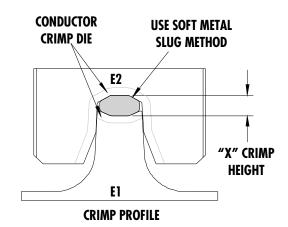

Use soft metal slug (solder) method to measure the "X" dimension. Verify tooling crimp height calibration by referring to the Go/No Go dimensions shown in the chart below.

Figure 4

Note: If the crimp height is too tight on the setting "A", check the shut height of the press. See the Industrial Mini-Mac Applicator Manual Section 2.1 for adjustments.

CRIMP SPECIFICATIONS

Wire Size		"X" Dimension Conductor Crimp						Pull Force Min.	
AWG	mm²	Mean Go		No Go		Lbs	N		
		In	mm	ln	mm	ln	mm	LDS	ı N
24	0.20	.070	1.78	.067	1.70	.075	1.91	5	22.24
26	0.12	.070	1.78	.067	1.70	.075	1.91	3	13.34

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.

Doc No. 63885-0100 Release Date: 12-07-04 UNCONTROLLED COPY Page 4 of 7 Revision Date: 10-03-05

Revision: B


PARTS LIST

Mini-Mac Applicator 63885-0100									
ltem	Order No	Engineering No.	Description	Quantity					
Perishable Tooling									
	63885-0170	63885-0170	Tool Kit (All "Y" Items)	REF					
1	63465-0028	63465-0028	Conductor Punch	1 Y					
2	63464-0026	63464-0026	Conductor Anvil	1 Y					
3	63463-0026	63463-0026	Insulation Punch	1 Y					
4	63462-0028	63462-0028	Insulation Anvil	1 Y					
	Other Components (Ref. 50050)								
31	63466-0912	63466-0912	Anvil Mount	1					
32	63466-0913	63466-0913	Terminal Support	1					
33	63443-0021	63443-0021	Lower Tooling Key	1					
42	63466-0921	63466-0921	Terminal Stripping Blade	1					
51	63600-1290	63600-1290	Washer	1					
52	63890-0866	63890-0866	Collar-6.4mm Lg.	1					
53	63890-0867	63890-0867	Collar-7.7mm Lg.]					
		Fr	ame						
81	63801-3301	63801-3301	Air Feed Applicator Frame Head	REF					
82	63801-3281	63801-3281	Base	REF					
83	63801-5850	63801-5850	Track Assembly	REF					
84	63801-3390	63801-3390	Air Kit	REF					
Hardware									
91	N/A	N/A	M3 by 12 Lg SHCS]**					
92	N/A	N/A	M4 by 10 Lg SHCS	2**					
93	N/A	N/A	M4 by 16 Lg. SHCS]**					
94	N/A	N/A	M4 by 45 Lg. SHCS]**					
95	N/A	N/A	M8 by 30 Lg. BHCS]**					
96	N/A	N/A	3mm by 6 Lg. Roll Pin 1**						
**	** Available from an industrial supply company such as MSC (1-800-645-7270).								

Note: Crimp profiles used in 63885-0100 are equivalent to 19288-0228/ATP-M-575 (UL file number E32244).

 Doc No. 63885-0100
 Release Date: 12-07-04
 UNCONTROLLED COPY
 Page 5 of 7

 Revision: B
 Revision Date: 10-03-05

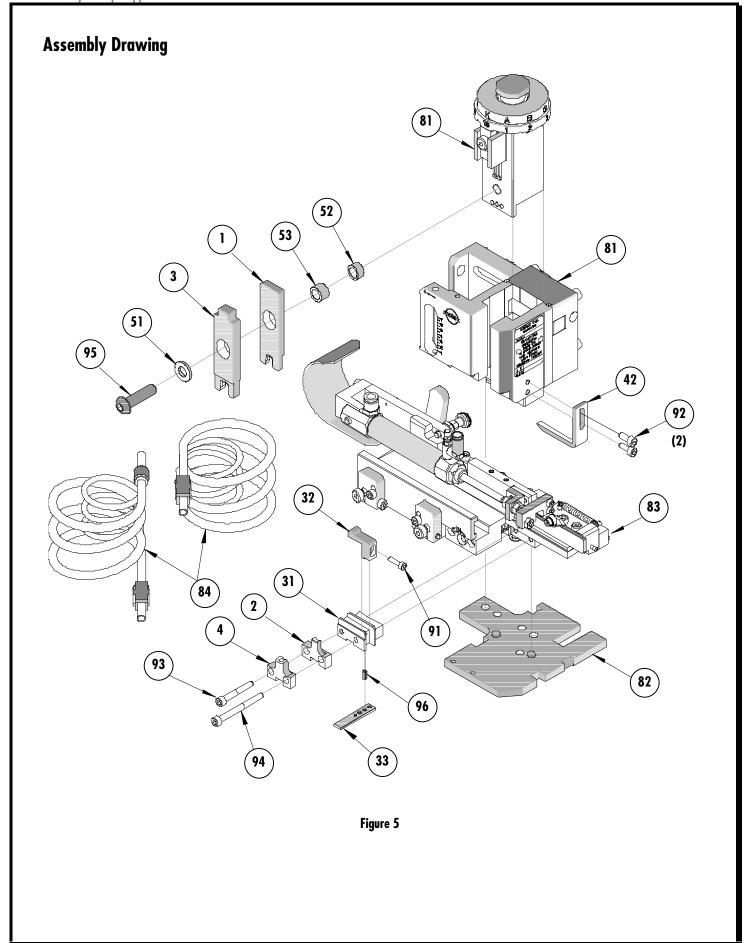

Doc No. 63885-0100 Revision: B Release Date: 12-07-04 Revision Date: 10-03-05

NOTES

- Molex recommends an extra perishable tooling kit be maintained at your facility.
- Verify tooling alignment by manually cycling the press with applicator before crimping under power. Check that all screws are
- Slugs, terminals, dirt, and oil should be kept clear of work area. 3.
- 4. Wear safety glasses at all times.
- 5. For recommended maintenance refer to the Mini-Mac Applicator Manual (Document no. 63880-0000).

CAUTION: This applicator should only be used in a press with a shut height of 135.80 mm (5.346"). Tooling damage could result at a lower setting.

CAUTION: To prevent injury, never operate this applicator without the guards supplied with the press or wire-processing machine in place. Reference the press or wire processing manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Contact Information

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Molex Application Tooling Group

1150 E. Diehl Road Naperville, IL 60563 Tel: (630) 969-4550 Fax: (630) 505-0049

Visit our Web site at http://www.molex.com

Doc No. 63885-0100 Release Date: 12-07-04 UNCONTROLLED COPY Page 7 of 7 Revision Date: 10-03-05